

■ 驱动器/再生装置 选择表

SR1-X

			FLIP-X																									
			T4LH/ C4LH	T5LH/ C5LH	T6L/ C6L	T9	T9H	F8/C8	F8L/ C8L	F8LH/ C8LH	F10 C10	F10H	F14/ C14	F14H/ C14H	GF14XL	F17/ C17	F17L/ C17L	GF17XL	F20/ C20	F20N	N15/ N15D	N18/ N18D	B10	B14	B14H	R5	R10	R20
驱动器 选择	SR1-X	05	●	●	●	●		●	●	●	●		●										●	●	●	●	●	
		10					●					●		●	●													●
		20														●	●	●	●	●	●	●						
再生装置	空白(不要)		●	●	●	①	②	●	●	●	①	②	①	②	●	③		⑥	③	④			●	●	⑤	●	●	●
	R (RG1)					①	②				①	②	①	②		③	●	⑥	③	④	●	●			⑤			

④ 超过最高速度1000mm/sec动作时,需要再生装置。

⑤ 超过最高速度1250sec动作时,需要再生装置。

⑥ 超过最高速度750mm/sec动作时,需要再生装置。

SR1-P

[illegible]